The **SPIRIT** collection WING COMMANDER How to use your watch

THE POWER RESERVE

The power reserve of a watch corresponds to the period of time between two consecutive windings, during which it will run without being worn on the wrist. When the watch stops, manual winding is recommended (at least 50 turns of the crown) to give the watch a minimum of power reserve when putting it back on your wrist.

Lifestyle is a major determining factor in the daily winding of an automatic watch: if you do not move your wrist enough on a daily basis, your timepiece will not be able to fully rewind. In this case, you are recommended to place the watch on an automatic winding mechanism to prevent the watch from stopping, or to manually wind it to benefit from a prolonged power reserve.



a. White power reserve: Shows that the movement is fully wound.

b. White & black power reserve:

Shows that the watch is still functional, but that the reserve is reaching its limit.

c. Red power reserve:

Shows that the movement has no more reserve and it needs to be wound.



WATCH SETTING

THREE-position crown

1. Neutral and winding position

Allows the user to manually wind their watch by turning the crown upwards.

2. Quick date setting position

Allows the user to change the date by simply turning the crown downwards.

3. Time setting position

Allows the user to set the time by turning the crown and turning the hands to the right time.



CAUTION

The owner of the watch must under no circumstances, use the system quick change date system (crown in position 2) between 20h00 and 2h00.

If the user does not know if the watch is in the AM or the PM mode, they should set the hands so that the hour displayed is 2h00 (crown in position 3), and once the date is changed, they can modify it without risk of damaging the movement or altering its accuracy.

When you set the time during an afternoon, remember to do this after 12h00 to be in the right AM/PM sequence.

After having carried out this operation, put the crown back in position 1, turn it downwards once and check that it turns freely.

Every time you manipulate the crown, change the time or the date, remember to return the crown to position 1.

WARNING

Your watch is guaranteed water-resistant to 3 bars (30 m) provided the crown is returned to position 1.