


The **VINTAGE** collection

# LONDON CHRONOGRAPH Triple Date - Valjoux 88

How to use your watch

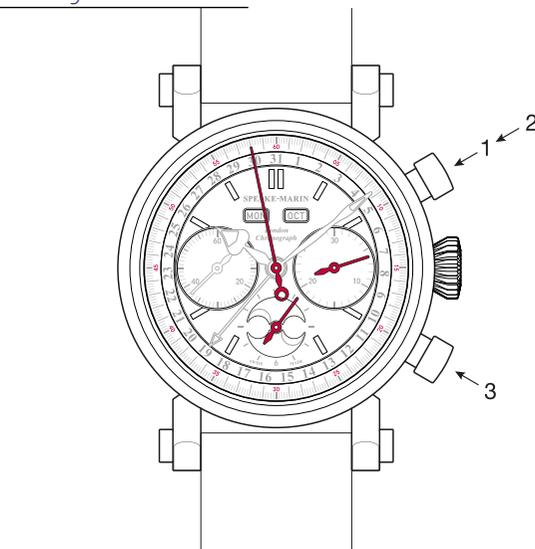

## CHRONOGRAPH OPERATION

### 1. Start

Press the push-button 1 to activate the red hands of the chronograph. If the length of the activity time exceeds 60 seconds, the additional time is displayed on the minute counter at 3:00, and on the small hour counter at 6:00.


### 2. Stop / Stand-By

Press push-button 1 for the second time to stop the chronograph and see the elapsed time (in seconds, minutes and hours). By again pressing push-button 1, the time restarts immediately. You can therefore, measure several consecutive periods.

### 3. Reset

After having stopped the chronograph by pressing push-button 1, press push-button 3 to reset all the counters.

The watch is now ready to count a new period again.

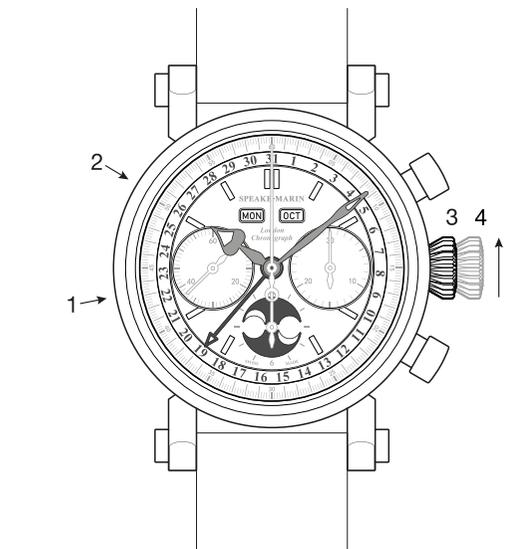

## WATCH SETTING

TWO-position crown

### 1. Moonphase and central date settings with the pusher at 8:00

Allows the user to set the Moonphase and central date

### 2. Month and day of the week settings with the pusher at 10:00

Allows the user to set the month and day of the week

### 3. Neutral and winding position

Allows the user to manually wind their watch by turning the crown upwards.

### 4. Time setting position

Allows the user to set the time by turning the crown and turning the hands to the right time.

**CAUTION:** Time setting must be done clockwise not to damage the movement.



**SPEAKE-MARIN**

## CAUTION

The owner of the watch must under no circumstances change the date between 20h00 and 2h00. If the user does not know if the watch is in the AM or the PM mode, they should set the hands so that the hour displayed is 2h00 and once the date is changed, they can modify it without risk of damaging the movement or altering its accuracy. When you set the time during an afternoon, remember to do this after 12h00 to be in the right AM/PM sequence. After having carried out this operation, put the crown back in the initial position, turn it downwards once and check that it turns freely.

Every time you change the time, remember to put the crown back in the initial position 3

## WARNING

Your watch is guaranteed water-resistant to 3 bars (30 m) provided the crown is placed back in the initial position 3.